
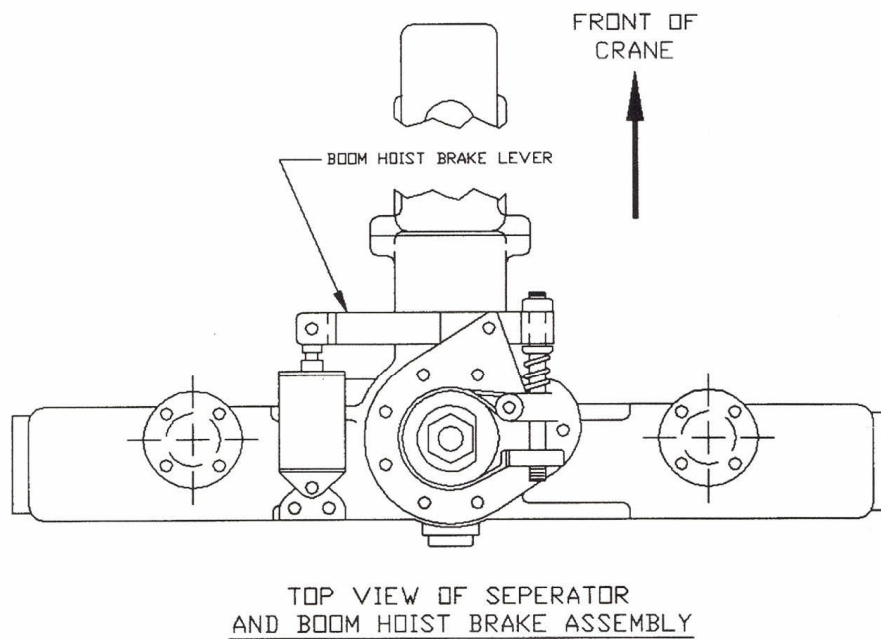


AOLCrane™ Product Support Bulletin No.39

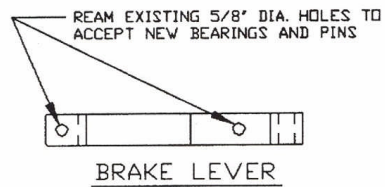

Boom Hoist Brake Band Assembly should be periodically inspected for wear and cracking.

Brake Band should be release completely while booming up and down.